Wiring diagram

Connnection to fan motor(s)

N. Neutral LF: Live out to Forward run winding (when forwrd mode is selected) LR: Live out to Reverse run winding (when reverse mode is selected)

